

图纸名称：手机三轴稳定器操作指引

物料编号：M1-P014

尺寸：218x104.5mm

材质：艾利不干胶/哑膜

使用指南

Swift M1 Gimbal Set Up Instructions



1. To unfold the Gimbal, press and slide the folding release button to the left.

滑动扳扣解锁手柄



 
2. Rotate the base of the Phone Clamp to the right (inward) to unlock.

向右(内侧)旋转解锁手机夹(稍微用力)




3. Rotate the Gimbal Handle down 180°. Slide the release button to the right to lock in place.

手柄旋转180°并滑动扳扣锁定

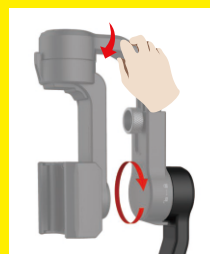

4. Turn the Gimbal Arm clockwise to unlock.

 顺时针旋转解锁摇臂(稍微用力)

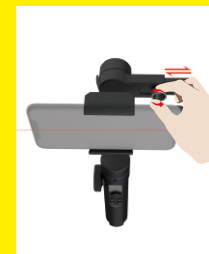

5. Attach the mobile phone onto the Phone Clamp.

To balance the mobile phone: 安装手机

① Turn the Balance Adjustment Knob. 扭动平衡调节旋钮
② Adjust the Gimbal Arm length as needed. 调整摇臂长度
③ Level the mobile phone. 让手机尽量处在水平平衡状态

*For your first use, the Gimbal was unlocked (Factory Default State).
为方便第一次使用,出厂前均使用不锁定状态。



Scan the QR code to access the video instructions.
扫码观看(视频教程)

To fold the Gimbal, follow the steps in reverse.
(Extend the Gimbal Arm to the maximum length.)
如需折叠,请按照步骤反向操作
(折叠时请把摇臂调到最长)

Please refer to the "Swift M1 Gimbal Instructions" for operating instructions.
Swift M1具体功能请查看说明书