

物料名称：35mm电影镜头转接环说明书
材质工艺：105g双铜四色双面印刷，折页


物料编号：ME-P042
折叠尺寸：77x95mm

展开尺寸：231x95mm

77mm

折痕线不印刷，英文做正面

95mm




Lens Mount Adapter Ring Instructions

Z Mount Adapter Ring for Nikon EF-M Mount Adapter Ring for Canon E Mount Adapter Ring for Sony

Appreciate for your purchase of the SIRUI product. Please read the Instructions before use.


Three types of adapter ring* are optional for a APS-C mirrorless camera with Sony E Mount, Canon EF-M Mount or Nikon Z Mount. Please buy a correct adapter ring for your camera and contact your SIRUI rep. when your adapter ring does not fit onto the camera. To attach the adapter ring to the lens, please follow the steps as below illustrated by giving an example of E Mount Adapter Ring for Sony mirrorless cameras.
(*Switch to a APS-C format when used with a full frame camera.)

1. Remove the four cross screws located on the lens mount with the provided screwdriver.

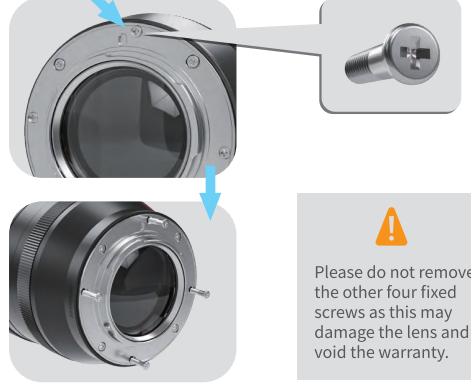


Please do not remove the other four fixed screws as this may damage the lens and void the warranty.

2. Align the Stop Pin located on the adapter ring with the pin hole on the lens mount then attach and secure the adapter ring to the lens. When attached, turn the adapter ring left and right to confirm it is in place.

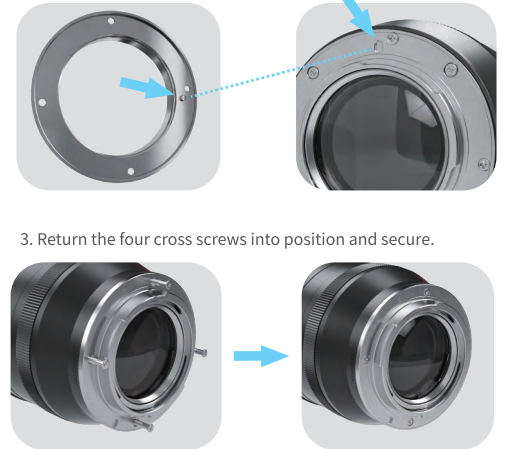

3. Return the four cross screws into position and secure.

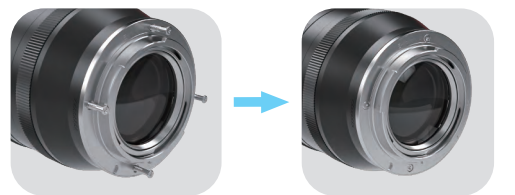

* Note: Only one adapter ring is included in the box.

正面




镜头转接环使用说明书

尼康Z卡口 佳能EF-M卡口 索尼E卡口

感谢您购买本产品，在使用之前请仔细阅读产品说明书。

镜头转接环一共有三种类型卡口[®]，分别是：索尼E卡口，佳能EF-M卡口，尼康Z卡口，您收到的转接环一定要符合您使用的相机品牌，如果卡口类型不正确，请联系我们。三种卡口转接环使用方法相同，说明书以索尼E卡口举例，介绍安装使用方法。

1. 找到镜头凹槽处的十字螺丝和与之相同的另外三颗十字螺丝，用配件螺丝刀拧松取出。

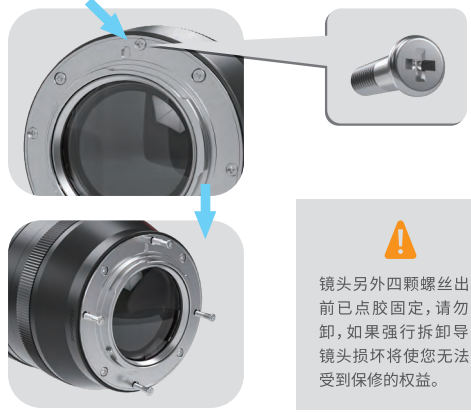

镜头另外四颗螺丝出厂前已点胶固定，请勿拆卸，如果强行拆卸导致镜头损坏将使您无法享受受到保修的权益。

2. 将转接环的限位销对准镜头凹槽装配，左右转动转接环检查是否稳固装配到位。



3. 将四颗十字螺丝装入对应孔位拧紧固定。



※ 包装盒里只含有一种类型卡口的转接环。

背面