




思锐

影像随心 思锐随行

广东思锐光学股份有限公司

物料名称：BCT系列2节管说明书  
物料编号：BCT35-1  
材质：100g双胶/CMYK  
展开尺寸：360x210mm  
成型尺寸：72x105mm


说明书正面(英文)



Professional Photographic Equipment

## INSTRUCTIONS

BCT Series Professional Video Tripod with 2 Sections

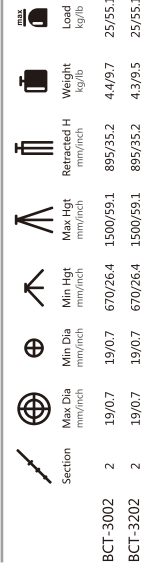

Section	Max. Load	Max. Height	Max. Weight
1	13.0	1500	1500
2	13.0	1500	1500
3	13.0	1500	1500
4	13.0	1500	1500

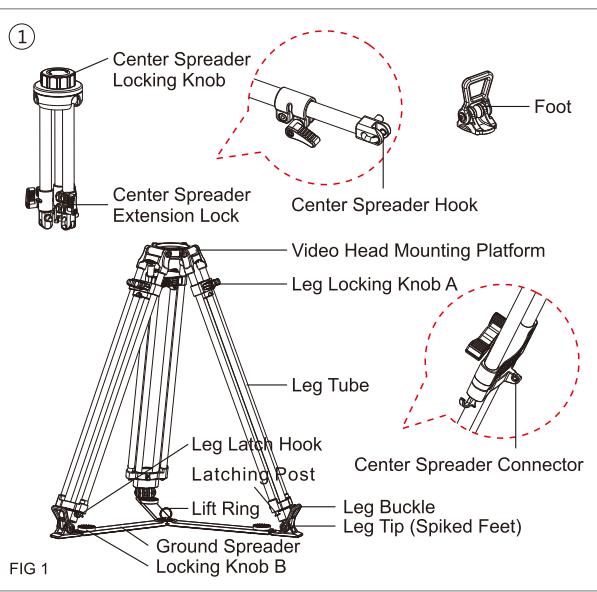


FIG 1

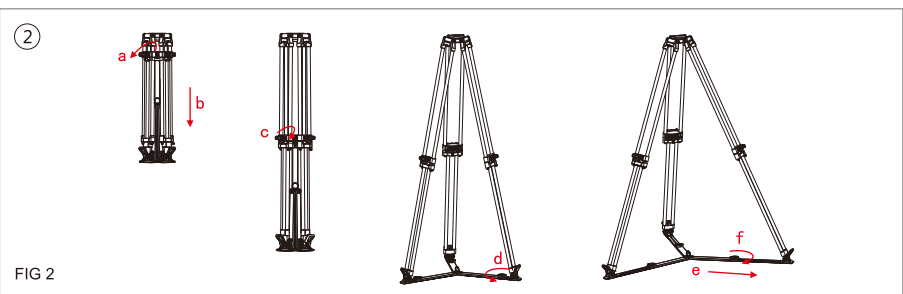


FIG 2

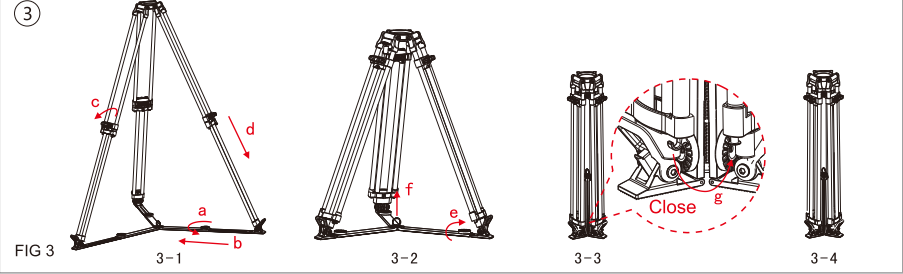


FIG 3

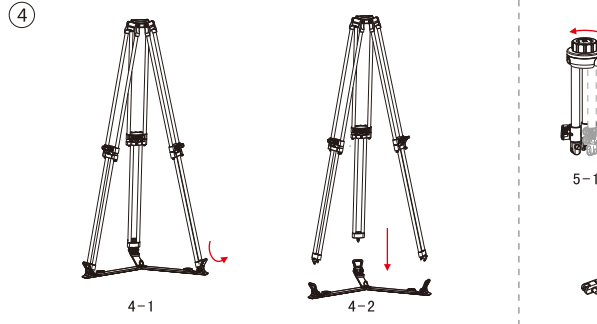


FIG 4

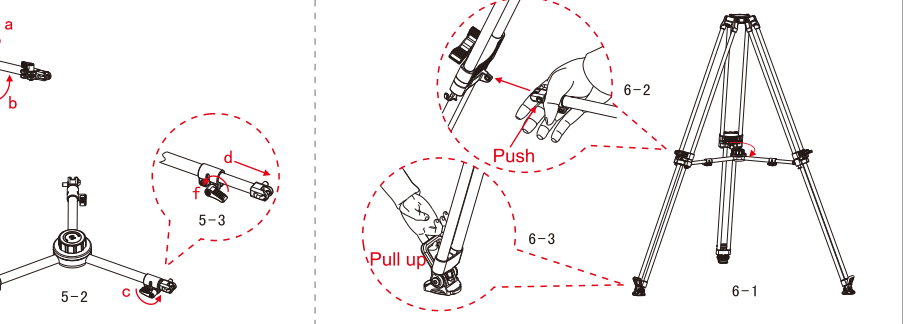


FIG 5

**1. Know your tripod**

**2. Setting up the tripod on a flat, smooth surface**

Fully loosen Leg Locking Knob A on all 3 legs, lift up from the Video Head Mounting Platform and re-tighten the locking knobs after the legs have fully extended. Spread the legs apart, until the Ground Spreader is flat on the ground. Loosen Locking Knob B to extend the ground spreader to the desired position and re-tighten Locking Knob B (see fig. 2).

**3. Retracting the tripod**

Loosen the 3 Locking Knobs B, retract the Ground Spreader and re-tighten the Locking Knobs B. Fully loosen the 3 Leg Locking Knobs A (see fig. 3-1), push down from the top of the tripod to collapse the legs, then re-tighten each locking knob. Pull up the Lift Ring in the middle of the Ground Spreader (see fig. 3-2), while holding the tripod and the three legs will move together (see fig. 3-3). Pull out the Leg Latch Hook and attach it onto the Latching Post on the adjacent leg to keep the tripod legs closed (see fig. 3-4).

**4. Setting up the tripod on uneven ground**

① Open the tripod (see fig. 4-1) and remove the Ground

Spreader by pulling the Leg Buckle up and away from the leg (see fig. 4-2).

② Loosen the Center Spreader Locking Knob by turning counter-clockwise. The three arms attached to the center spreader can be moved up to 90° (see fig. 5-1); loosen the Center Spreader Extension Lock and the center arms can be extended (see fig. 5-2, 5-3).

③ Place the end of the Center Spreader next to the Center Spreader Connector, push the button on the Center Spreader Hook, position the hook onto the Center Spreader Connector and release. Tighten the Center Spreader Extension Lock (see fig. 5-2).

④ If you do not want to use the spikes, place the foot between the two spikes on the bottom of the leg. Pull the Buckle up and towards the leg and hook it onto the groove at the end of the leg (see fig. 6-3). You can adjust the legs to the desired angle by loosening the Center Spreader Extension Lock and extending the arms as needed. Make sure that the longer section of the foot is facing away from the tripod.

**Attention**

Do not exceed the recommended load limit of the tripod head and/or tripod. (Please refer to product specifications.)

Please make sure that the locks are securely tightened when in use.

This product should not be used in environments that exceed the following conditions (-40 ~ +100°C/40 ~ +212°F). And, when used in damp, dirty or dusty environments, please clean and dry thoroughly after use, to assure proper functioning in the future. It is not recommended to expose this product to saltwater. If exposed, please clean with mild soap and warm water and towel dry.

Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time.

Please do not leave the equipment alone in a public place, which can be an inconvenience or hazard to others.

To protect your camera and video gear, please remove it from the tripod/video head when transporting from place to place.

Please use a soft towel with warm water and mild soap to clean the locking system and gliding parts when necessary. Towel dry before storing the tripod.

Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.

Please keep this product away from all electrical power sources.

**Note:** A separate video head with 100mm ball and leveling base is required to attach your video camera onto the BCT Video Tripod.

**Specifications are subject to change without notice.**

### WARRANTY CARD INFORMATION

Dear SIRUI Customer,

Thank you for your purchase of SIRUI Professional Product! SIRUI warrants that your purchase is free from defects in materials and workmanship under normal use during the Limited Warranty Period. The Warranty begins on the original date of purchase on your sales receipt and is not transferable. If service is required, a copy of the sales receipt must be included with an explanation of the problem.

Product	Warranty Length
Tripods / Monopods / Accessories	6 years
Humidity Control Cabinet (Cabinet)	3 years
Humidity Control Cabinet (Electronics)	3 years

Model: \_\_\_\_\_ Date: \_\_\_\_\_

Store: \_\_\_\_\_ Serial Number: \_\_\_\_\_

**Warranty coverage can differ from region to region. Please see the contact information below for product registration, information and service for the region the product was purchased in.**

SIRUI 6 (six) Year Limited Warranty (3 Year Warranty for Electronic Parts). This warranty shall be limited to repair, adjustment and/or replacement at SIRUI or its authorized distributors option, of defective parts, free of charge (except the cost of transportation to the distributor/service center). Responsibility is limited to the actual cost of the item. Call or Email with questions and service before sending any product to the center in your region. Below is a listing of contact information for Product Registration, Service Inquiries and Questions. SIRUI will not be responsible for expenses or inconveniences, or consequential damages to equipment, or by breach of any expressed or implied warranties.

**Limitations:**

Warranty is not transferable.

This warranty covers all defects encountered in normal use of the equipment and does not apply in the following cases:

1. If the equipment has been serviced by other than an authorized SIRUI Service Center.
2. Damage to the equipment is due to modification (including but not limited to, the removal of ballhead clamps), overloading, mishandling, abuse, accident, sand, corrosives, water damage or not following operating instructions.
3. No valid proof of purchase is provided.
4. Damage caused by acts of nature (including, but not limited to fires, floods or earthquakes).

Warranty coverage can differ from region to region. Please see contact information below for product registration information and service for the region the product was purchased in.

**Warranty Address and Contact Information:**


(Please contact the seller or the local distributor where the product was purchased for warranty issues or questions and before any product is sent.)

1. Guangdong SIRUI Optical Co., Ltd.  
The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China  
Tel: 0086-760-88897373 Fax: 0086-760-88207062  
E-mail: info@sirui-photo.com  
Service Hotline: 0086-400 830 2299  
Complaint Hotline: +86-181 6563 9388  
(Monday to Friday 8:15am-12:15pm, 14:00pm-18:00pm)

2. SIRUI USA, LLC  
Add: 29 Commerce Court Verona, NJ 07044  
www.sirui.com  
Service: Toll Free 866-373-0829 E-mail: info@sirui.com  
FOR PRODUCTS PURCHASED IN THE USA PLEASE SEE:  
http://www.sirui.com E-mail: info@sirui-photo.com  
For full details on USA Warranty Terms and Limitations.  
https://www.siruiusa.com/warranty.html  
To register products: https://www.siruiusa.com/product-registration.html

3. European Service Center  
Add: SIRUI Optical GmbH • Ernst-Augustin-Str.1a • 12489 Berlin • Germany  
Phone: +49 30 991 94 00 • Email: info@siruioptical.eu


说明书背面(中文)



影像随心 思锐随行

## 使用说明

BCT系列单级专业摄像三脚架



Section	Max. Load	Max. Height	Max. Weight
1	13.0	1500	1500
2	13.0	1500	1500
3	13.0	1500	1500
4	13.0	1500	1500

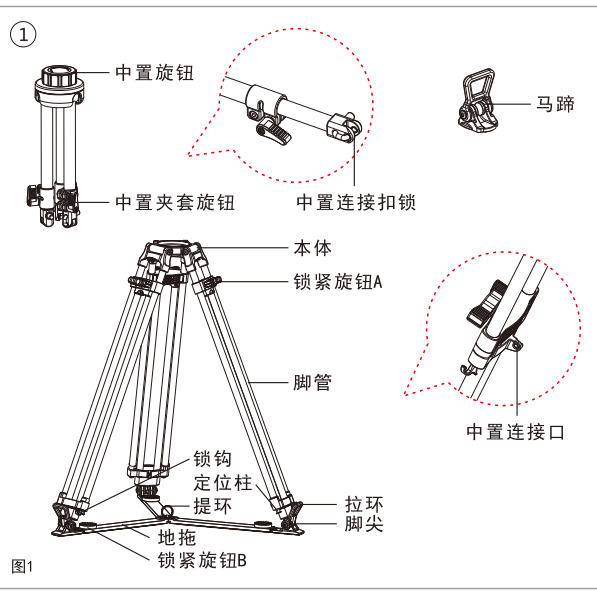


图1



图2

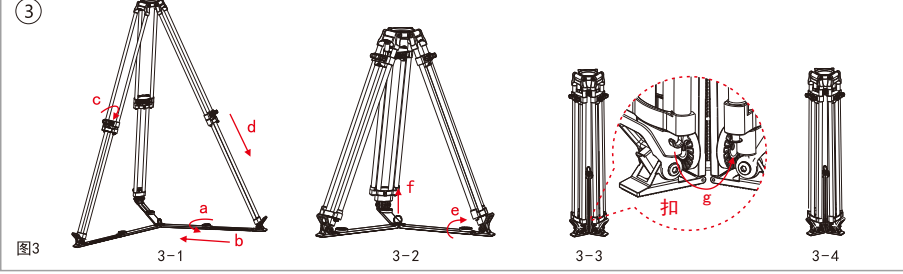


图3

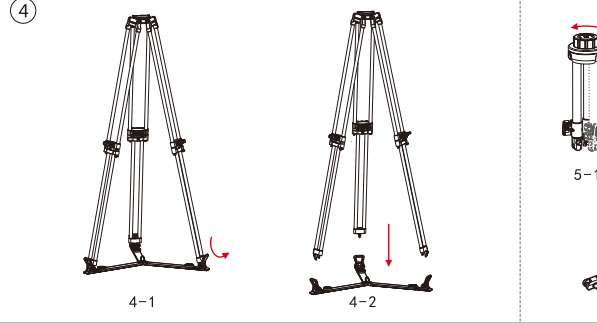


图4

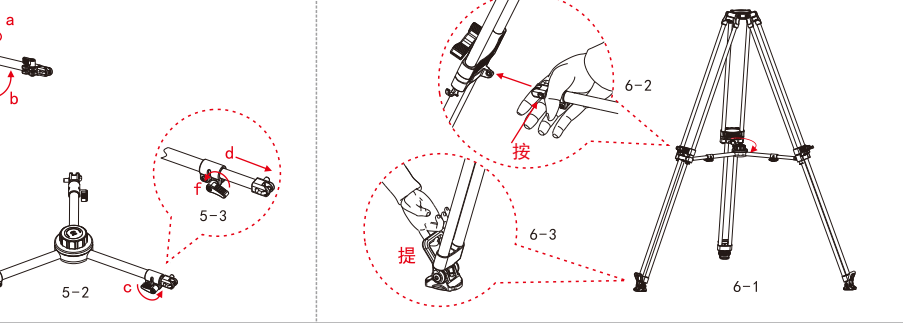


图5

**1. 认识三脚架**

**2. 在平整的地面打开脚架**

先把脚管的三个锁紧旋钮A完全松开，待脚管向下完全滑出后再锁紧旋钮。放置地面，把锁钩解开，然后把地拖通过三个锁紧旋钮B松开至合适的位置，再锁紧旋钮，调整放置地点完成操作（如图2）。

**3. 收起脚架**

先松开三个锁紧旋钮B，把地拖收紧后再锁紧旋钮；然后把三个锁紧旋钮A全部松开（如图3-1），收缩各脚管后固定各旋钮，然后提起地拖中间的提环（如图3-2），整理三支脚管的密合度，最后将锁钩扣到定位柱上（如图3-3、3-4），完成操作。

**4. 在复杂的地面打开脚架**

①把三脚架按步骤打开（如图4-1），再把地拖

从三脚架上通过松开拉环取下（如图4-2）。

②在扭松中置旋钮后，可以实现中置三条支脚在90°范围内转动（如图5-1）；再扭松中置夹套旋钮，可以加长中置支脚的行程（如图5-2、5-3）。

③用手按住中置挂钩上的按钮，分别卡入脚架相对应的卡槽内，然后松开手实现中置与脚架的连接（如图6-2）。

④将马蹄放在脚架脚尖处相对应的卡槽内，提上拉环实现与脚架的连接（如图6-3），将脚管调整至合适角度，再将中置旋钮锁紧，最终实现脚架在复杂地面的使用。

**注意事项：**

不要超过最大的制造负重（请参考个别产品规格）。

当使用产品时，时紧锁紧其安全装置。

切勿在温度低于零下40摄氏度及高于100摄氏度使用。当在潮湿/沙地/布灰尘的环境下使用时，请记得产品干及清洗，不建议在海水中使用。

切勿将产品长时间放在太阳下曝晒及避免高温环境，例如长时间放在车箱内或类似环境。

在公共场所使用时，如在无人照料下，切勿将设备带离引致其他公众不便。

建议在运输过程中，将设备（例如相机）从脚架上移除。

使用温和清洁剂及柔软毛巾清洗，将尘埃及污垢从所有锁制及活动部件清除。

维修需要，此设备需要定期添加润滑油，如确实需要时，请使用标准润滑油或油脂。

为自身安全着想，切勿将产品接触任何电源。

**温馨提醒**

请勿将三脚架连同未拆封的摄像机一起放在车上，剧烈的晃动可能会对摄像机造成损伤。

如果摄像机，请从最大管径的脚管到最小管径的脚管的顺序拆下，切勿倒置时，请从最小管径的脚管到最大管径的脚管的顺序拆下。

思锐公司保留产品升级和由于产品升级而变更各参数的权利，请以实际为准，恕不另行通知。印刷品上如有印刷错误或因版面的限制造成不便，敬请谅解。

### 保修卡

尊敬的顾客：

感谢您购买思锐的产品！在正常使用过程中，如果因器材本身的材料及工艺出现质量问题，思锐将会提供免费的保修服务。在需要保修服务时，请提供本保修卡和购买凭证（收据或发票，须有商家盖章）。思锐公司售后服务热线：400 830 2299

保修电话：+86 181 6563 9388（上班时间：8:15-12:15, 14:00-18:00）

产品名称	保修期限
脚架	6 年
云台	
防潮柜本体	
电子部分	3 年

产品型号：\_\_\_\_\_ 购买日期：\_\_\_\_\_

商店名称：\_\_\_\_\_ 商店电话：\_\_\_\_\_

商店地址：\_\_\_\_\_

商店盖章：\_\_\_\_\_

顾客须知：

- ① 思锐产品，享终身免费保修（电子部分为3年），保修时间从购买之日起。
- ② 所保产品，必须是在思锐正式授权的经销商或电子商务场所购买。
- ③ 寄回修理时，请先行拨打思锐售后服务电话，待确认保修后，思锐公司会派员上门，一次性故障在7个工作日内完成维修并寄回。
- ④ 防潮箱的保修，请先确定发生问题的部件，把故障部件下单独寄回思锐工厂维修即可，其他可参照使用说明书或致电服务热线。
- ⑤ 以下情况不在保修范围：
  - ① 通过非保修期。
  - ② 在未经授权的情况下私自拆卸或改装。
  - ③ 在未按照思锐授权的代理商或维修中心维修过。
  - ④ 由于不正当操作、意外事件、自然灾害导致的故障或损伤。

※ 本保修卡仅限在中国大陆使用





### 维修登记表A

用户姓名	用户电话	用户地址	邮编
故障维修描述			
维修人员签名	维修时间		

### 维修登记表B

用户姓名	用户电话	用户地址	邮编
故障维修描述			
维修人员签名	维修时间		

说明书折叠方法:

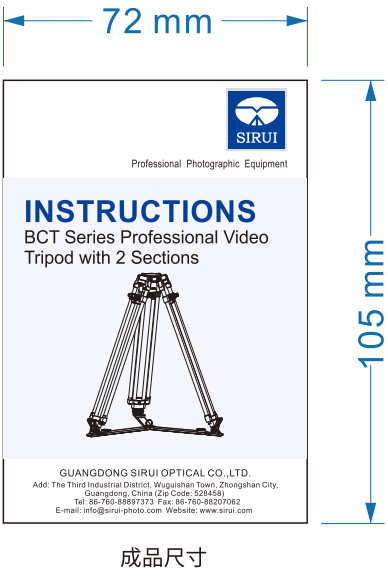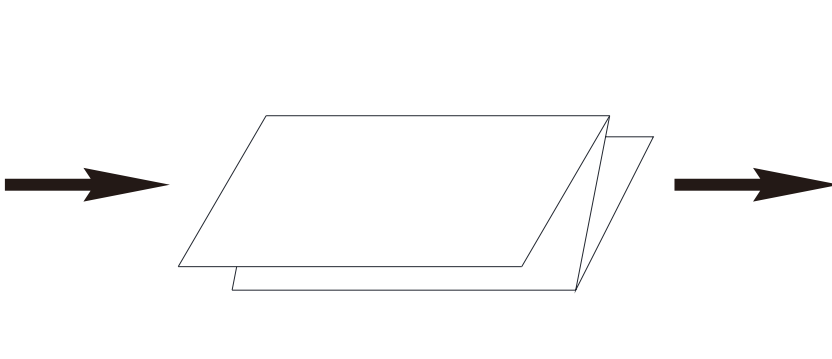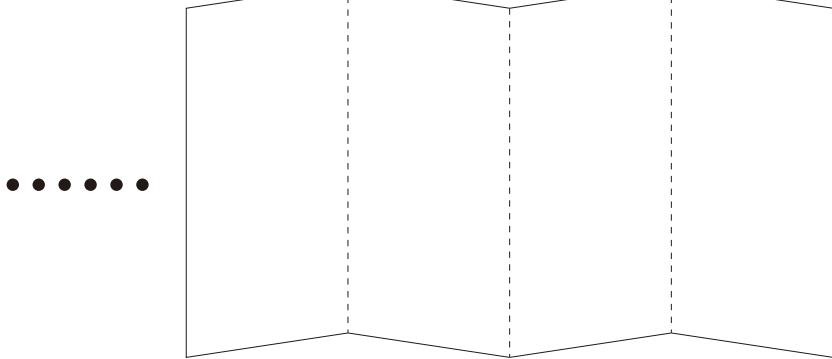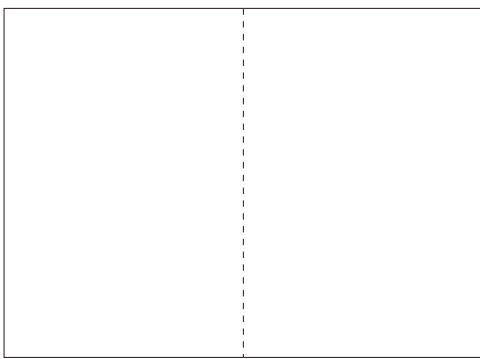

包装工程师: 彭少章

翻译:

审核:

批准: